




## PILLAR TAP

Congratulations for purchasing this quality Ewing Tapware Range. Our product is manufactured to the highest quality under strict quality control procedures.

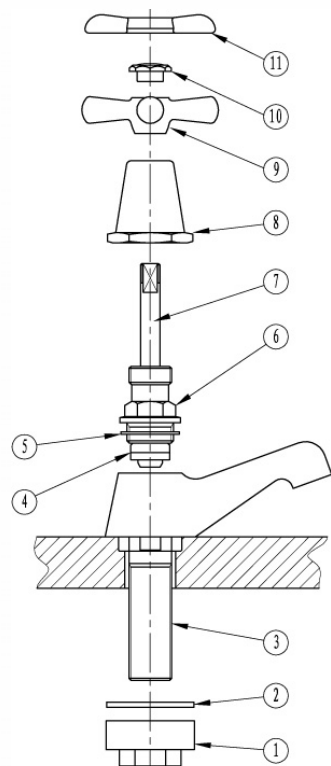

1. Backing Nut
2. Fiber Washer
3. Body
4. Jumper Valve
5. Fiber Washer
6. Stuffing Box
7. Spindle
8. Flange
9. Handle
10. Button
11. Button Spanner

Generic Model Shown

## **Installation Instructions.**

All pipe work must be thoroughly flushed prior to installation, as foreign materials may block the flow-regulating device and reduce the flow of water.

**This product comes factory assembled and ready for installation**

Please follow these instructions:

1. Remove the Pillar Tap backing nut from the body, Place the Pillar Tap into the basin.
2. Replace the backing nut on the Pillar Tap and tighten, ensure that the Pillar Tap is secure.
3. Connect the appropriate pipe work to the Pillar Tap body (1/2" BSP) and on to the corresponding water supply. This pipe work maybe Flexible Tails or Copper Pipe with nit and olive
4. Before turning the water supply back on, make sure the Pillar Tap is turned on slightly, this will allow any foreign matter to be removed.

For after Sales and Service in Australia  
 Phone: 1800 135 906  
 Fax: 07 3205 6905  
**PLEASE RETAIN YOUR PROOF OF PURCHASE**

## **Warranty.**

Thank you for choosing a quality Ewing Product that is manufactured to Australian Standards Requirements. Ewing Tapware (where applicable) has been rated under the Water Efficiency Labelling Scheme (WELS), our WELS licence number is 0037.

## **Technical Information**

- ◆ Hot and Cold water inlet pressures should be equal.
- ◆ Inlet pressure must not exceed 500kPa.
- ◆ Minimum operating pressure of 150kPa is required.
- ◆ Maximum hot water temperature 80 degrees Celsius.
- ◆ Not suitable for gravity feed systems

## **Terms and Conditions.**

Ewing Industries undertakes to repair, or at its option replace only, any product, which is defective through faulty workmanship or materials within 12 months of the purchase of the goods. The warranty period commences from the date of purchase. Ewing Industries reserves the right to provide components as 'parts only' to the customer. This warranty is only applicable for products purchased from an authorised Ewing Industries reseller. The labour component of the warranty does not cover excessive time taken to access or remove the product from its installed location. The warranty is limited to Ewing Industries products only and does not cover other manufactures products, which may be attached to Ewing Industries products.

Warranty may be void due to the following reasons :-

- ◆ Inability to provide proof of purchase.
- ◆ Products are not installed by a licensed plumber or in accordance with relevant industry standards or regulations.
- ◆ The product is exposed to water pressures that are greater than 500kPa and temperatures exceed 80 degrees Celsius.
- ◆ Products used for incorrect applications and in inappropriate locations.
- ◆ Products are cleaned with anything other than a soft cloth soaked with warm water. The use of abrasive cleaners or harsh detergents may void the warranty

## **Care and Cleaning.**

Clean regularly with warm water and a soft cloth  
 Do not use abrasive cleaners or harsh detergents.