
QUIK-GRIP ADJUSTABLE 32mm SHOWER BRACKET

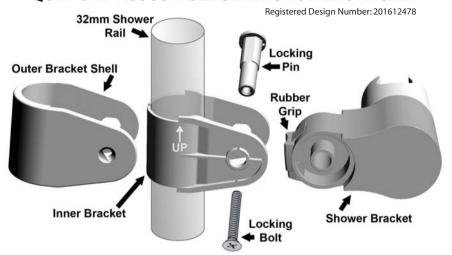

QUIK-GRIP Handy Hint: Locate the UP symbol on the Inner Bracket to guarantee alignment of all components during installation.

QUIK-GRIP Operation: Tilt up the Shower Bracket to move the Rubber Grip away from the rail, move to the desired location, tilt back down to grip the rail.

Warranty Information

Ewing Industries will repair or replace this product where a fault is shown to be caused by faulty manufacture or materials for a period of 12 months from the date of purchase. This warranty is subject to correct installation procedures and product use. This warranty does not cover breakages caused by excessive force being applied to the bracket. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For all warranty claims please contact:

Ewing Industries Pty Ltd 11 Bailey Court Brendale QLD 4500 PO Box 5446 Brendale QLD 4500 Ph: (07) 3205 6099 Fax: (07) 3205 6905

Email: sales@ewingindustries.com.au
Proof of purchase must accompany all warranty claims.



Leaders in Accessible Tapware